


AERO TRIM

Assemble the Aero-Trim

Step 1.

Assemble the parts on a flat worksurface, imagine that the surface is the inside of the Aero-Trim for the purpose of these assembly instructions.


1. Remove any protective backing from the plastic pieces.
2. Place the two base plates without adhesive tape on the work surface ensuring the curved edges face each other..
3. Align your pieces as shown. Please note that the top links are longer than the lower links.
4. Use the shorter bolts. The four longer bolts are for attaching the Aero-Trim to your bike.
Insert the bolt through "Long Link" > "Left Baseplate (top)" > "Long Link", tighten the nut by hand, complete this step also for the "Right Baseplate (top)"
5. Insert a bolt through "Short Link" > "Left Baseplate (bottom)" > "Short Link", tighten the nut by hand, complete this step also for the "Right Baseplate (bottom)"

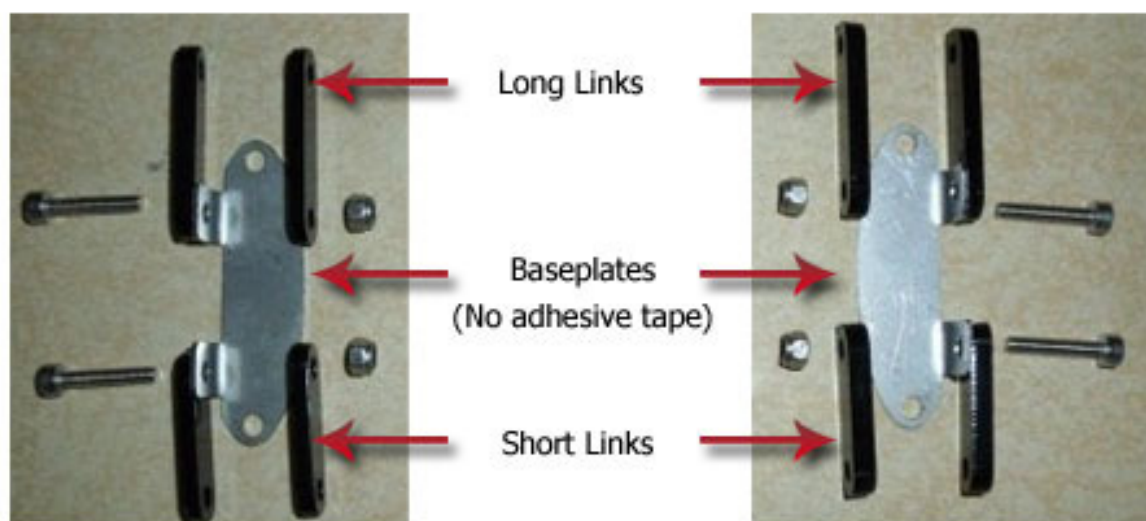

Step 2.

1. Place the two baseplates with adhesive tape above the partially built link unit, again ensuring that the curves face inwards.
2. Insert the bolt through "Long Link" > "Left Adhesive Plate (bottom)" > "Long Link", tighten the nut by hand.
3. Insert the bolt through "Long Link" > "Right Adhesive Plate (bottom)" > "Long Link", tighten the nut by hand.

(NOTE: Ensure the bolts are on the inside (curved) edge.)

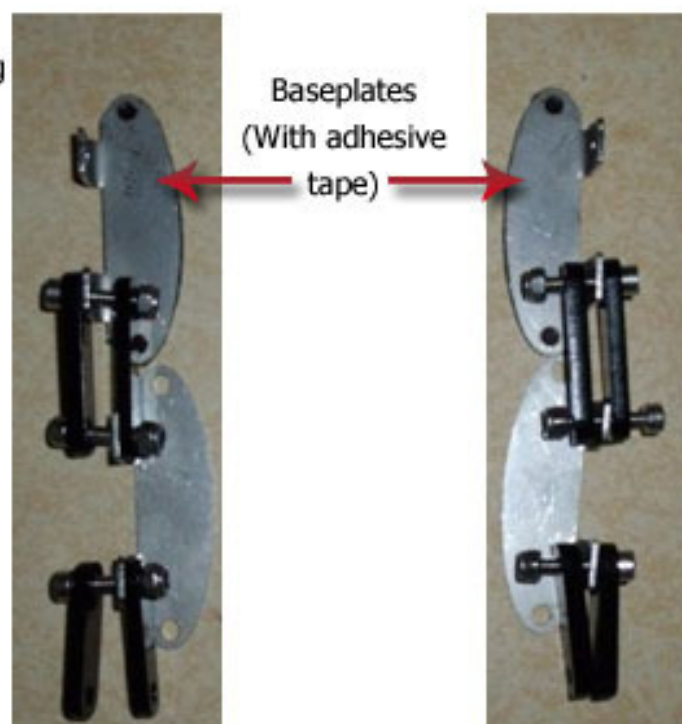

AERO TRIM

Assemble the Aero-Trim

Step 3.


Fold the arms around and insert a nut and bolt through the hole to complete the assembly as shown below. Ensure that the nut and bolt are in the same orientation as the previous nuts and bolts.

Lightly tighten the nuts to a point where you can still adjust the assembly up and down.



Step 4.

Install a bolt through the backing plate, and then through the front of the Aero-Trim.

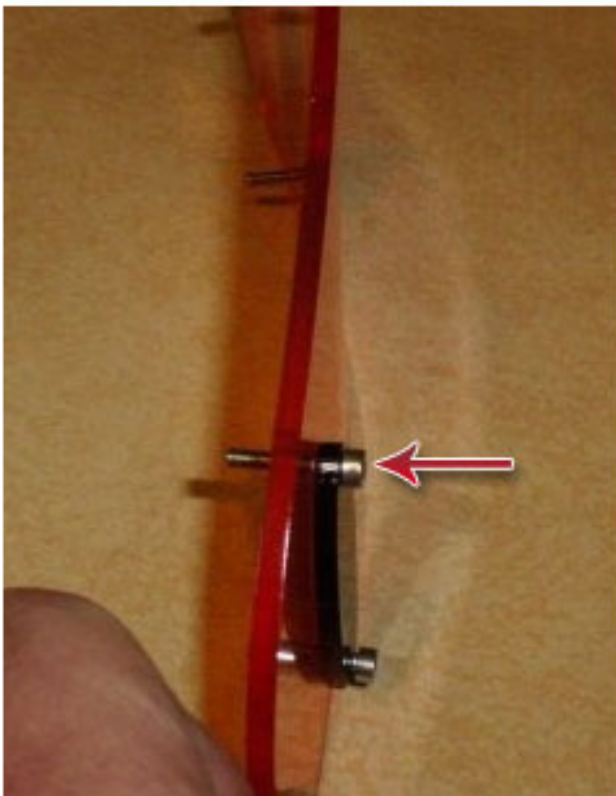

AERO TRIM

Assemble the Aero-Trim

Step 5.

Attach the built-up assembly to the back of the Aero-Trim as shown below.

IMPORTANT: The shorter link is at the bottom of the Aero-Trim.



IMPORTANT!
SHORT LINK AT THE BOTTOM. !

Step 6.

Your Aero-Trim is now ready to be installed onto your motorbike. Do not tighten any of the nuts at this point to allow adjustments once installed.

Please refer to the installation instructions available at <http://www.aero-trim.com>